

Note: Any time the magnet activates the receiver, the number of beeps will indicate the current receiver level. As long as the magnet is held in place, it will advance the receiver to the next training level and continue to cycle through the settings in the order shown on the chart below.

TRANSMITTER SETTINGS

Training Mode: The Training Mode Switch allows you to choose between two pet friendly training options: Basic (Mode A) and Simultaneous (Mode B).

- In the Basic (Mode A) setting, your pet receives the normal audible warning followed by a correction if he continues into the signal field.
- When set to Simultaneous (Mode B; used primarily for harder to train dogs), your pet receives an Audible Warning and a Correction at the same time.

NOTE: If you have multiple dogs on the system, the Training Mode setting effects all receivers. They are ALL set to the same mode, Basic or Simultaneous.

TRANSMITTER MODE AND RATE SETTINGS

Mode A Rate 1	Mode A Rate 2	Mode A Rate 3	Mode B QuickAlert™
Transmitter Rate Fixed at Medium			
Slow	Medium	Fast	Slow
Slow	Medium	Fast	Medium
Slow	Medium	Fast	Fast
Fast			Fast
X - Fast			X - Fast
XX - Fast			XX - Fast
Audible and XXX Fast Correction are Simultaneous			

AutoMemory™
self activates
and advances
to the next level.



*** IMPORTANT ***
Never change the receiver Training Levels when your dog is wearing the collar.


10 Michigan Dr
Natick, MA 01760
800-793-3436



For more information visit:
www.dogwatch.com

Operating Instructions
R10X Receiver

R10X Receiver

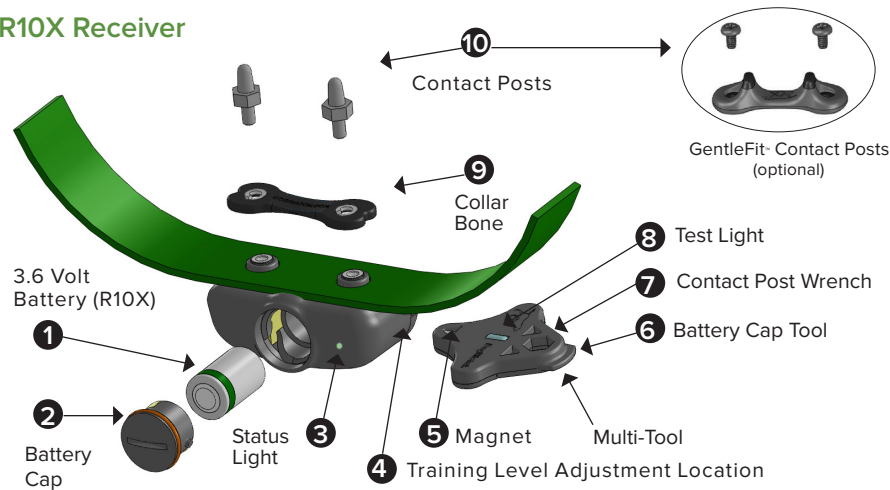

The components of the R10X (above)

Receiver Battery


The R10X uses a replaceable battery. The receiver is waterproof when the battery cap is fully seated.

R10X Battery: The R10X receiver uses a 3.6 volt lithium battery. With normal use, battery life should be about 6 months for the R10X. The positive (+) end of the battery must be inserted down.

Resetting the Battery Status Light

1. Remove the old battery.
2. Let the receiver sit for several minutes before inserting a new battery. If you forget to wait prior to inserting a new battery, the flashing red battery status light will continue to flash for 24 hours before automatically resetting.
3. Insert a new battery.

Insert R10X battery **POSITIVE** end down.

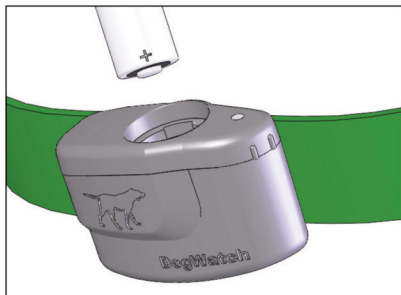


Setting the Receiver

Receiver Training Levels Your receiver provides eight training levels that allow you to customize the training setting to your dog's individual needs: Audible Only, Level 1 (extra low), Level 2 (low), Level 3 (low medium), Level 4 (medium), Level 5 (medium high), Level 6 (high), and Level 7 (extra high). When the receiver is shipped from the manufacturer, it is set to Training Level 2 (low).

Changing the Receiver Settings If you need to change the Training Level on the receiver, hold your test light magnet to the marked area on the side of the receiver. Hold the magnet steady and you will hear a series of beeps that indicate the current training level. The "Audible Only" level is one long beep, Level 1 is one short beep, Level 2 is two short beeps, Level 3 is three short beeps, etc. The Training Level will continue to advance while the magnet is held in position. When you reach the desired setting, pull the magnet away from the receiver. The receiver is now set.

Using the magnet to set the training level on the R10X Receiver.

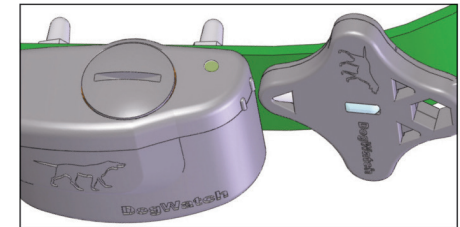

Receiver Features

Status Lights

- **Start-Up** When you first insert the battery into your receiver, the status light will flash red and green. This indicates that the receiver has started properly. Once started, the status light will continue to flash green once every 40 seconds indicating normal operation. In the event that the light does not flash, check the battery to be sure that it has been inserted properly.
- **Training Level Indicator** When programming the training level of your receiver, the status light will flash green in conjunction with audible beeps. The number of flashes will equal the training level you have chosen.
- **Signal Field Indicator** When testing the receiver in the signal field the status light will flash green when the receiver is in the warning zone and will flash green and red when the receiver is in the correction zone.
- **Correction Alert (TattleTale™)** The status light's TattleTale feature shows if your pet has entered the fence boundary. If so, the light will flash green every 40 seconds for 24 hours: **twice** if your pet entered the audible warning zone and **three times** if your pet entered the correction zone.
- **Battery Indicator** This feature monitors the voltage level of the battery. When the receiver detects that the battery has reached a low voltage level, the status light will change from the normal blinking "green" every 40 seconds to blinking "red" every 10 seconds. This indicates that your battery is close to the end of its useful life and you should change the battery within the next 3-4 days.

AutoMemory™ When the receiver is set to Level 4, 5, or 6, our AutoMemory feature automatically raises the correction level of the receiver if your pet enters the avoidance zone. If the dog does not enter the signal field again in the next 24-hour period, the receiver defaults to the original setting.